



Back rest installation guide

How to install a back rest on a Martini

The tools needed for instalation are:

Drill with 5,5mm drill bit

#10 spanner

Flat screw driver

Scissors

The backrest package should include:

1 Plastic backband


1 Point65 backrest No 2B

2 x Screw JIS-M6x25mm

2 x 6mm washers

2x 6mm nut


5,5mm shock cord

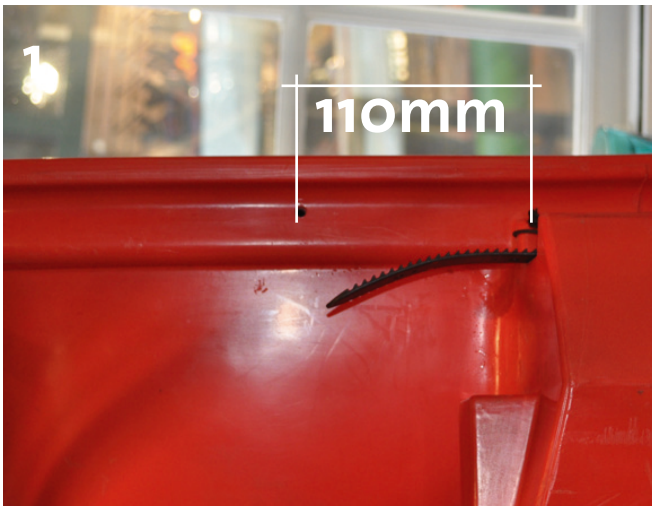

1. Measure the distance from the bulkhead on the side of the kayak as on the image above. Make sure the hole is centered. Do it again on the other side.



2. Use a 6mm drill to make the hole on each side of the cockpit.

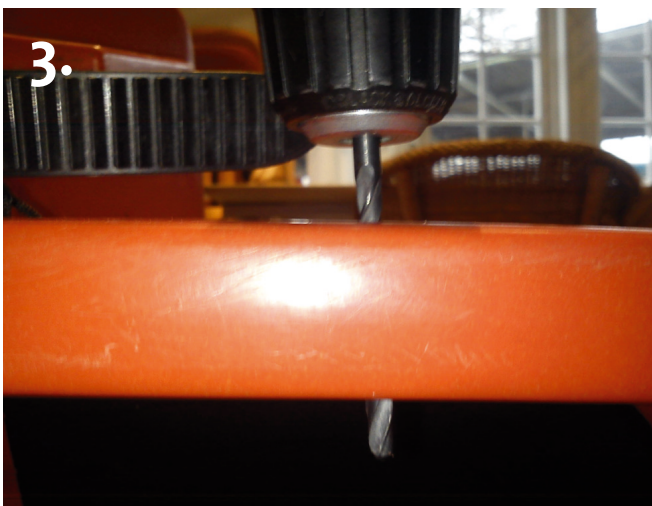

3. The drill should go through both layers of the cockpit




4. Prepare the backrest by pushing the backband through the pocket on the back of the back rest. Make sure the plastic back band has the nice side forward.



5. Push the screw from the inside of the cockpit into the plastic backbands outermost hole and through the drilled hole on the cockpit rim.



6. Fasten the nut with a washer between the nut and kayak. Don't pull too tight, but make sure the screw reaches the blue plastic locking thread on the nut.

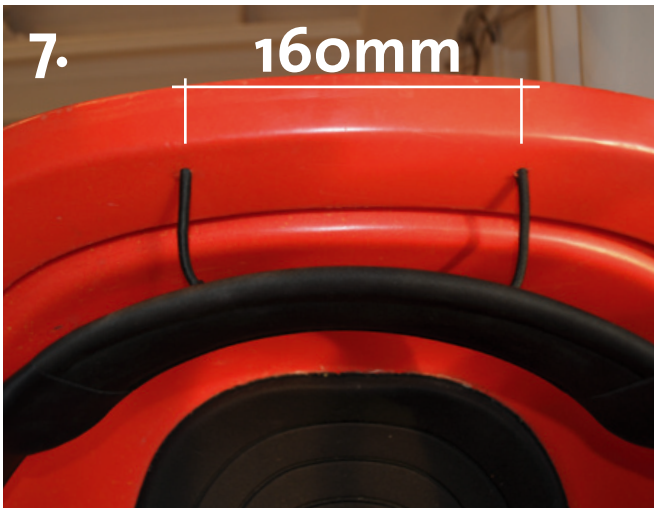

7. Drill $\frac{3}{4}$ " holes on the inside lip of the cockpit rim - DO NOT DRILL THROUGH THE OUTER RIM - or it will leak into the kayak through the holes!!! The holes should be equally wide apart from the center line of the kayak.



8. Pull the shock cord through the loops in the back of the back rest and through the holes in the cockpit. tie the ends together behind the backrest and cut off excess cord.